

Venetian Blinds Care Guide

ecoshadesolutions.com.au



Look after your Venetian blinds by following the straightforward operating instructions below

Operating

- The cord on the Venetian operates the height of the blind.
- The wand operates the angle of the slats.
- To raise the blind pull the cord down until the blind reaches your desired height, pull the cord away from the face of the blind to lock it into position.
- To lower the blind pull the cord across the face of the blind to release the cordlock and let the cord slide gently through your fingers.
- To adjust the angle of the slats, twist the wand until they are at the desired angle.
- When raising and lowering, the blinds slats should be in the open position.
- Please note: Venetians do not close totally - it is the nature of the product.

Cleaning

- Your Venetians simply need to be dusted.
- Use a duster, a damp cloth or vacuum cleaner with a wall-cleaning attachment.
- Care should be taken not to bend the slats while cleaning.
- If your blind becomes very dirty, use a damp cloth with clean water. Dry thoroughly.
- We do not recommend using any soap or detergent.
- Anti-Static cleaning cloths are suitable.

Child Safety

Your blinds have been installed with a child safety device compliant with the ACC.

This is not to be removed.



 ecoshadesolutions.com.au

 info@ecoshadesolutions.com.au

 Office 02 9386 5440